



MAYTAG® COMMERCIAL TOP-LOAD WASHERS

Read instructions before starting washer.
Lea las instrucciones antes de usar su Lavadora.


1 ADD DETERGENT Agregue detergente



2 LOAD CLOTHES Cargue la lavadora



3 ADD BLEACH (if desired) Agregue el blanqueador líquido con cloro

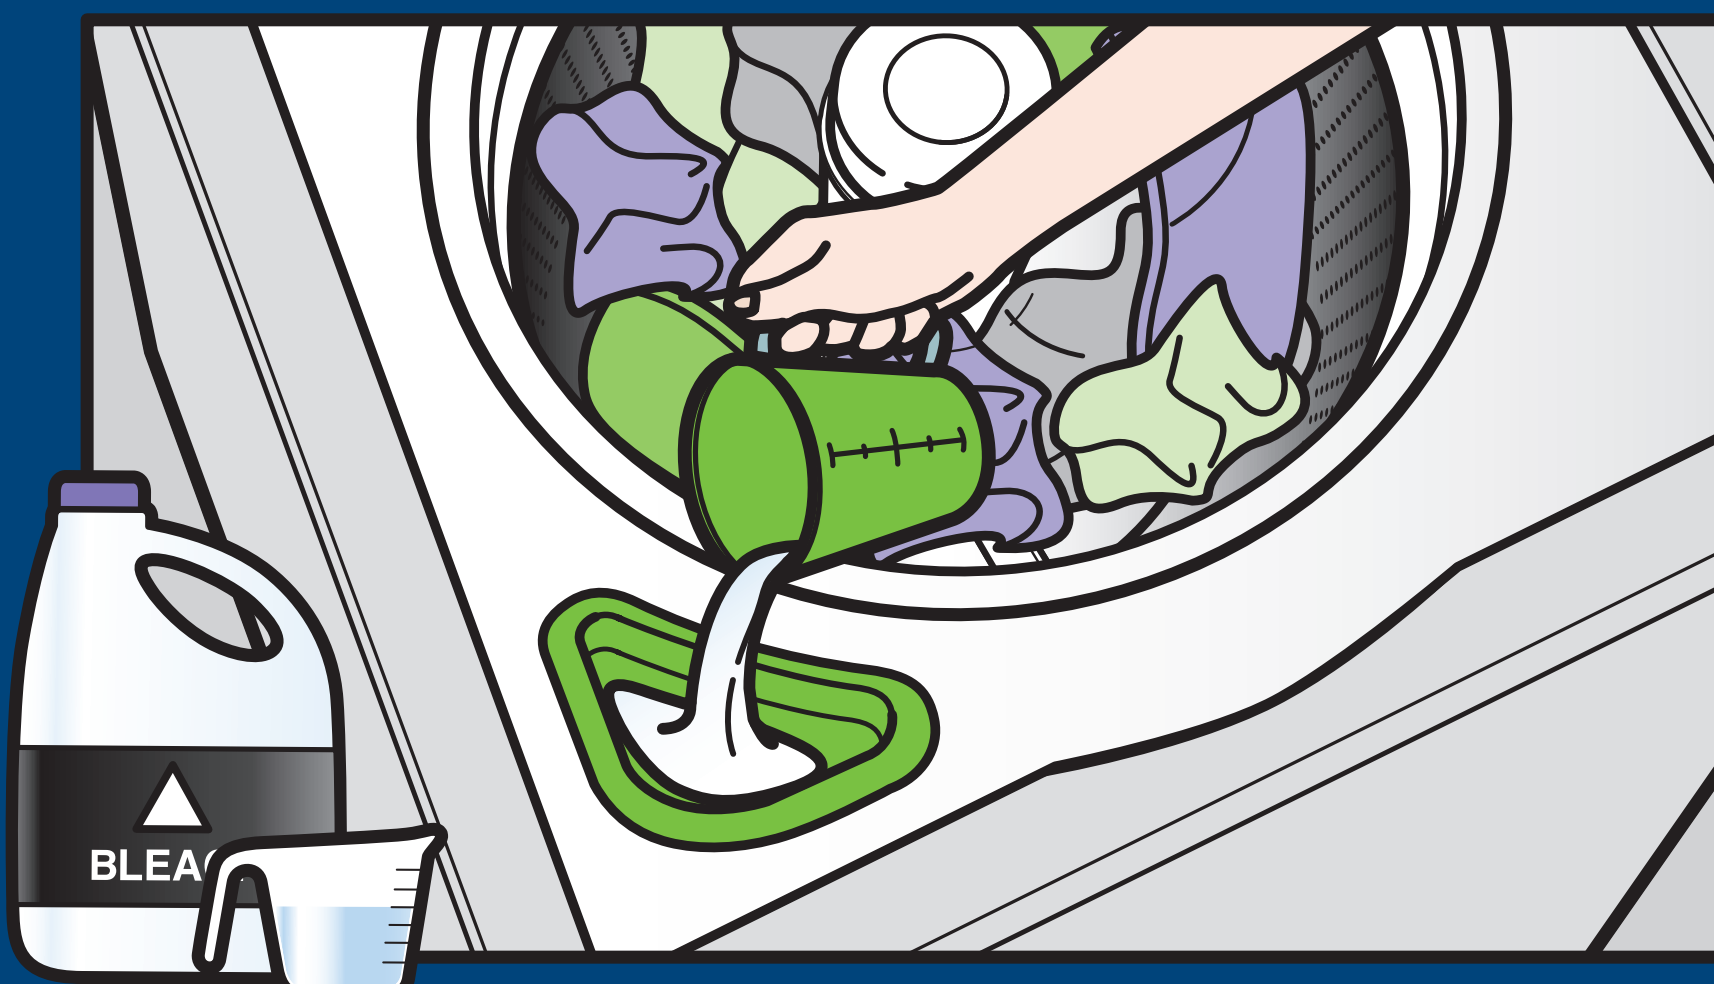

4 CLOSE LID Cierre la tapa




5 MAKE SELECTIONS & PAY Complete el proceso

- A** - Make Cycle Selections
Haga las selecciones
- B** - Insert Payment
Inserte el pago
- C** - Press Start
Presione Start (Inicio)

NOTE: Selections cannot be changed once start button is pressed. Lid will lock 20 seconds after pressing START

NOTA: No pueden cambiarse las selecciones una vez que se haya presionado el botón de Start (Inicio).

Lid will lock 20 seconds after pressing START.

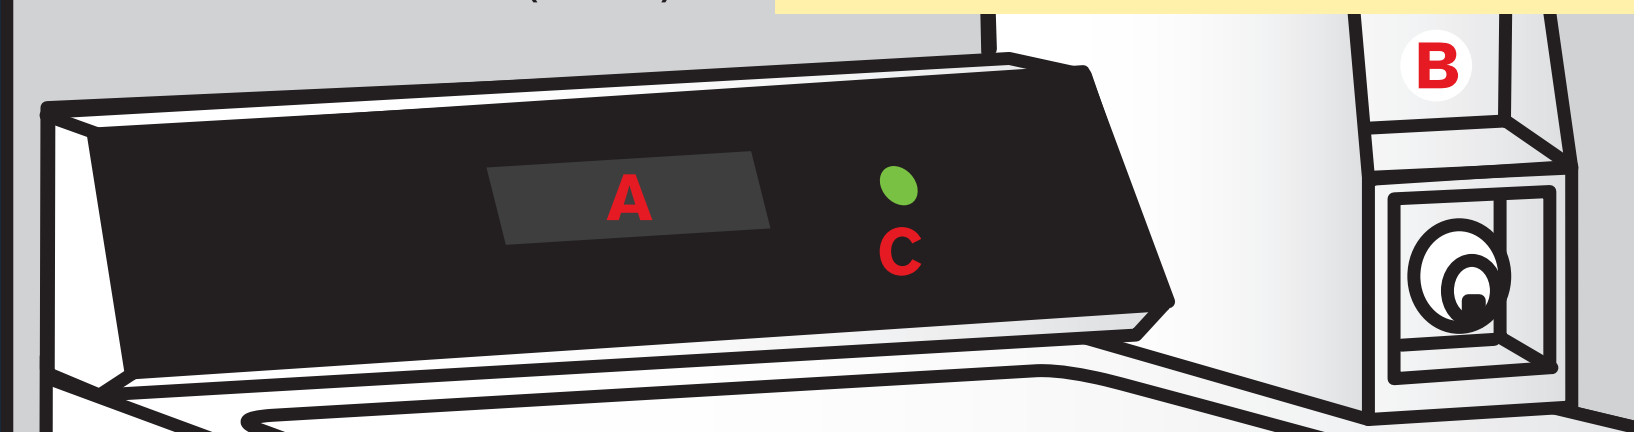

Once the Start button is pressed, the LID WILL LOCK and will not unlock until cycle ends.
Una vez que se haya presionado el botón de Start (Inicio), la tapa se bloqueará y no se desbloqueará hasta que se termine el ciclo.



WHAT'S INSIDE MATTERS™

SEBCO

LAUNDRY
SYSTEMS™