 



EASY WASHING

MULTI-LOAD FRONT-LOAD WASHERS

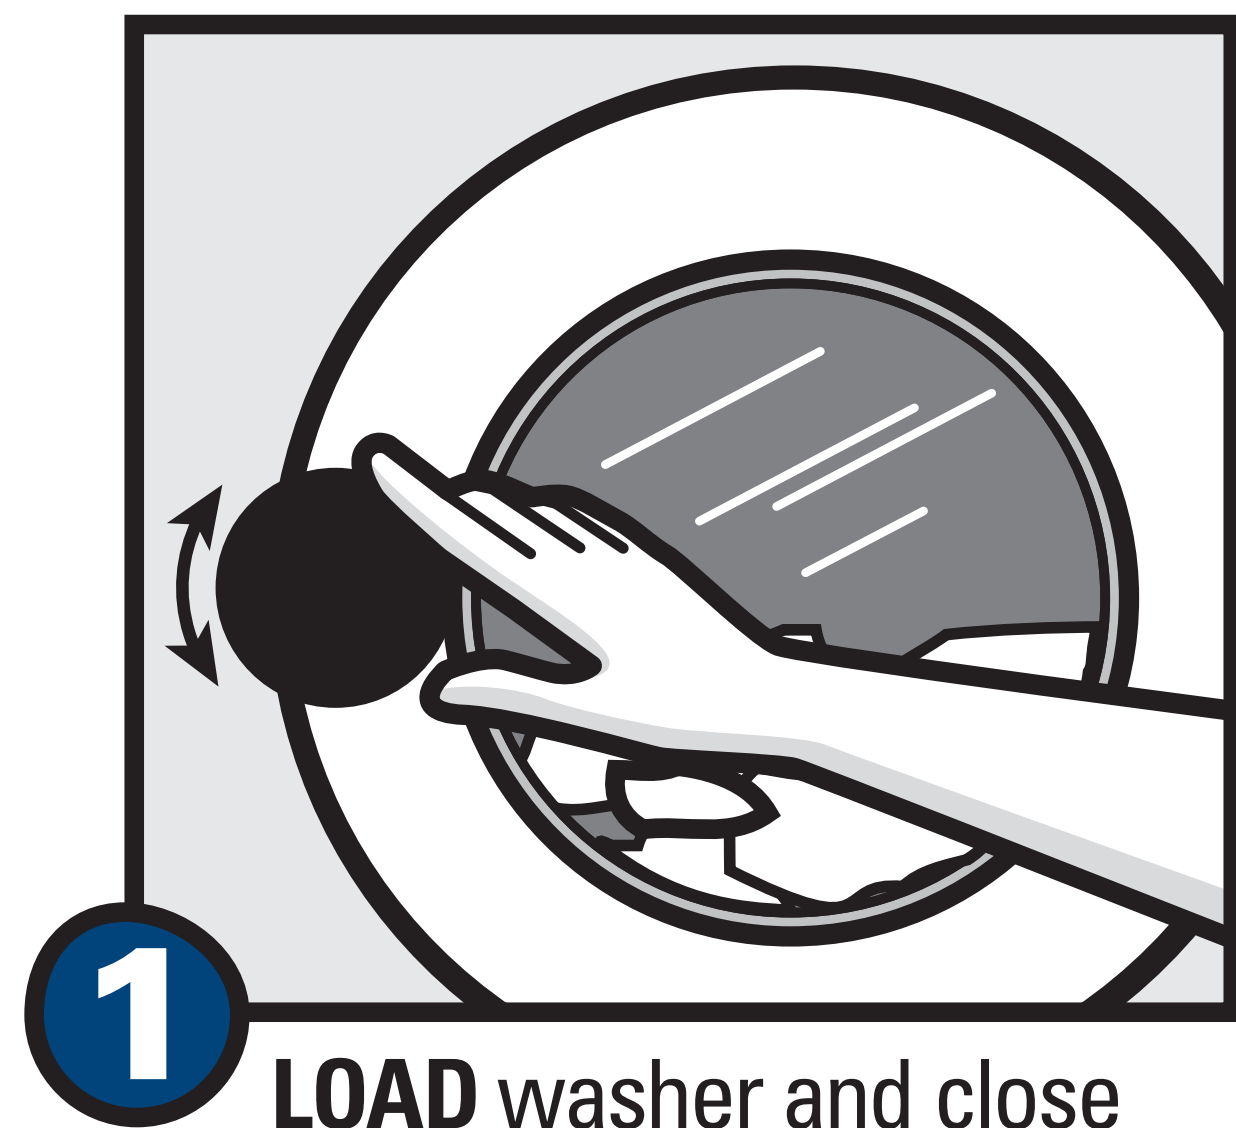


1

 LOAD washer and close door securely.

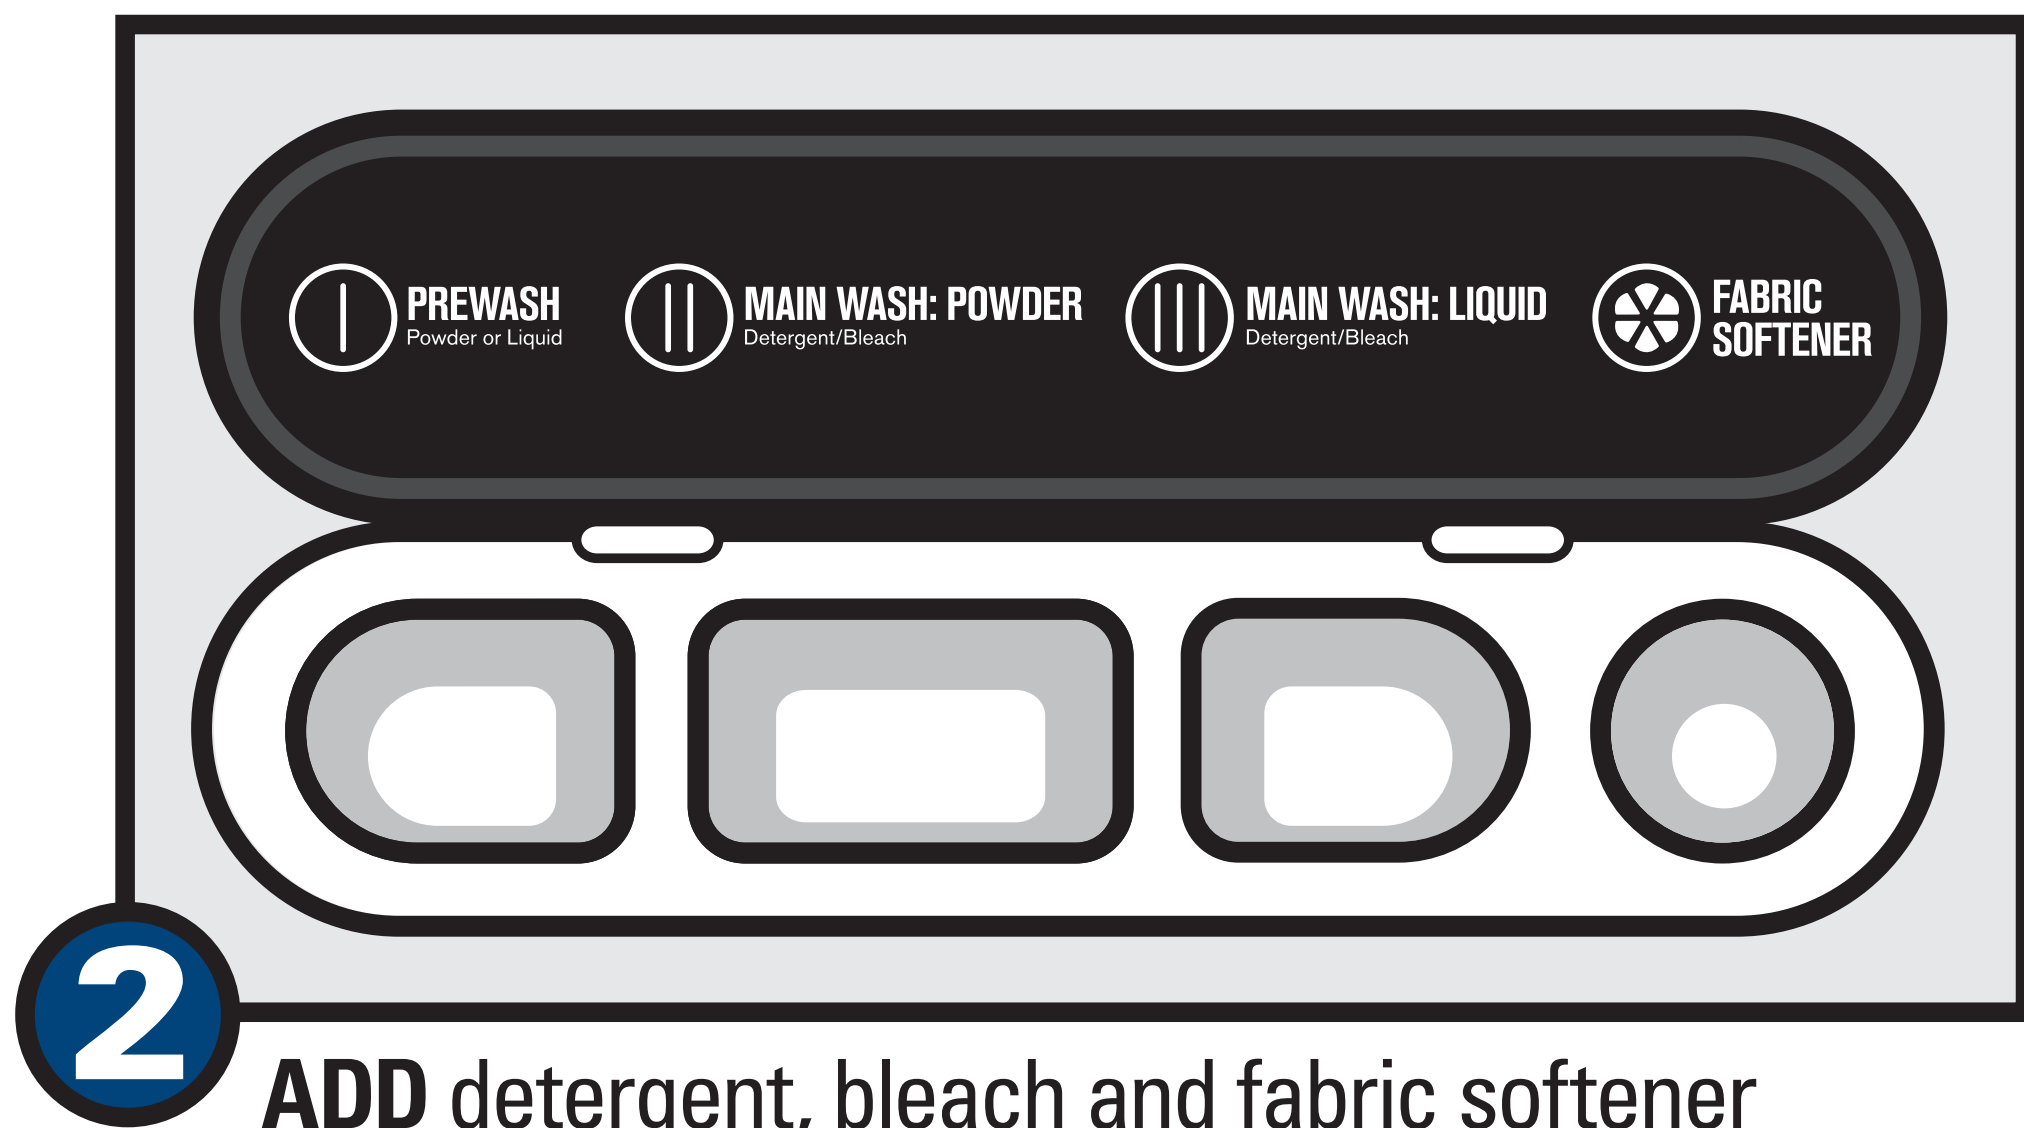


2

ADD detergent, bleach and fabric softener to dispenser.

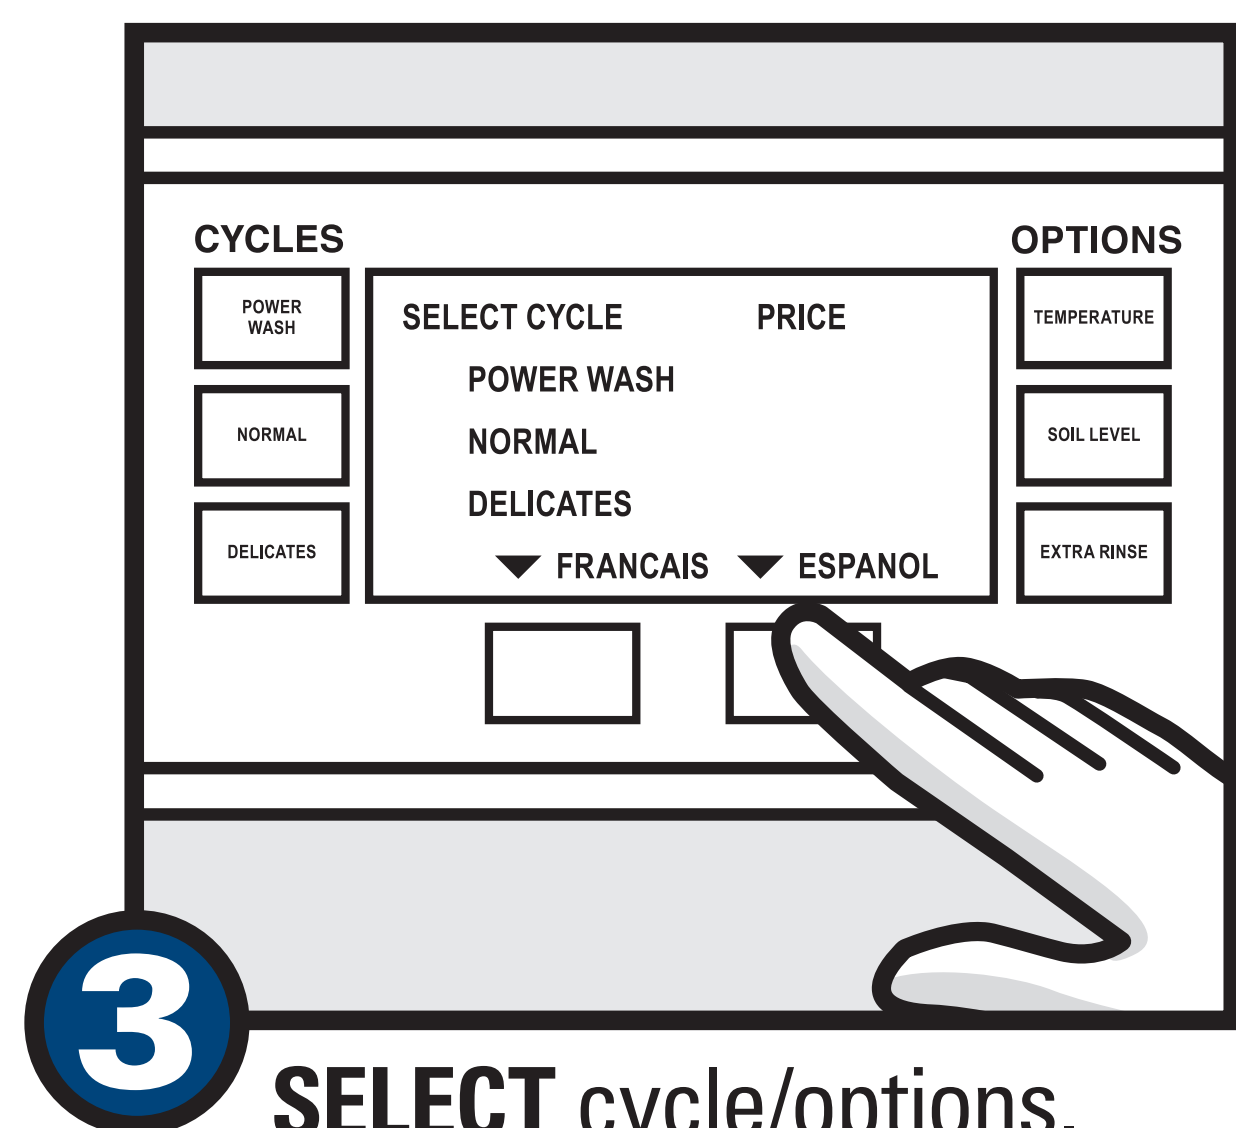

3

SELECT cycle/options.

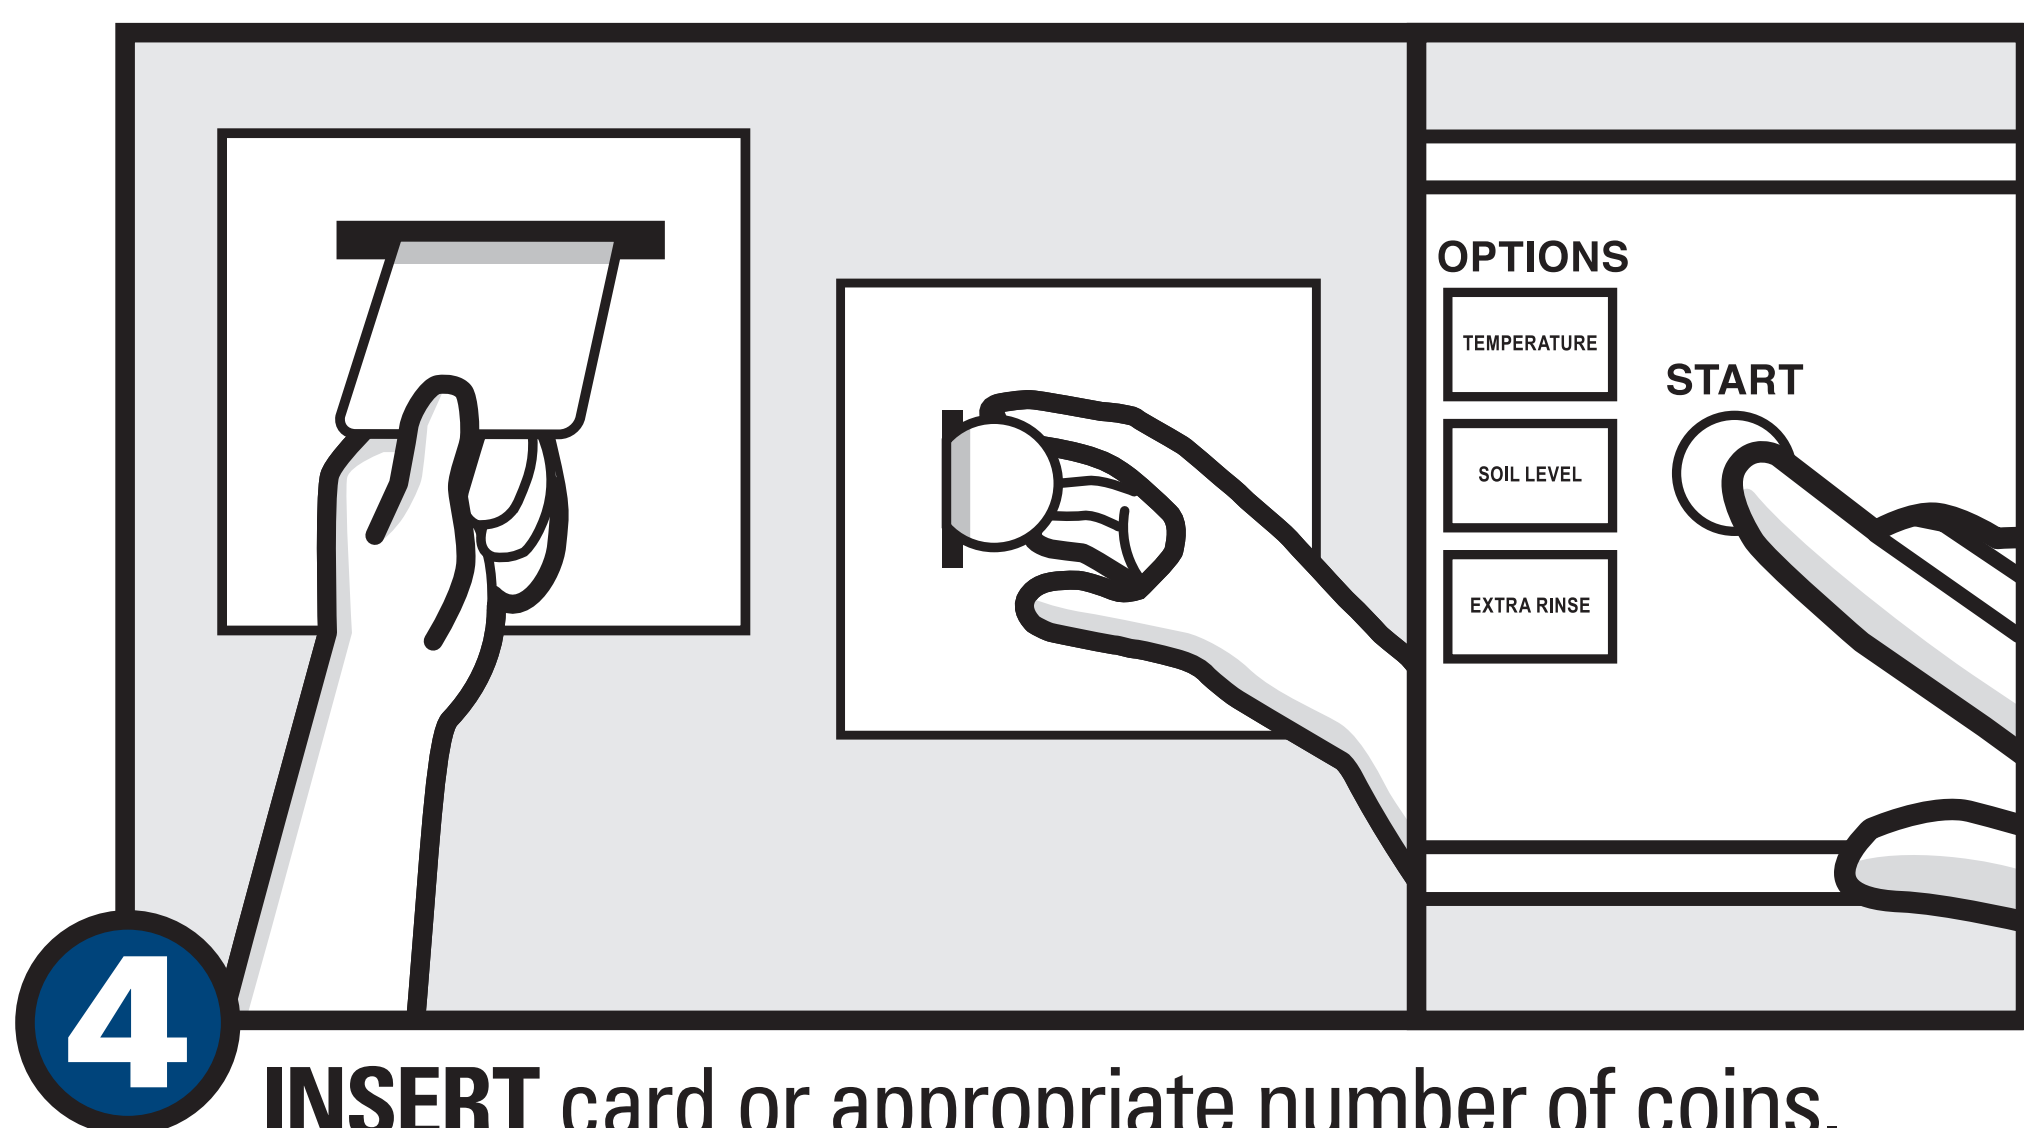

4

INSERT card or appropriate number of coins. Press start.

WASH LARGER LOADS AND SAVE TIME!

- Customize your wash cycle.
- Select PowerWash® for heavily soiled items.



WHAT'S INSIDE MATTERS™

SEBCO

LAUNDRY
SYSTEMS™

MY140241 9/14